

## 4.7.5. Operating instructions for panel timepieces

### Statuses




Flying time running and adjustable



Flying time stopped



Flying time reset

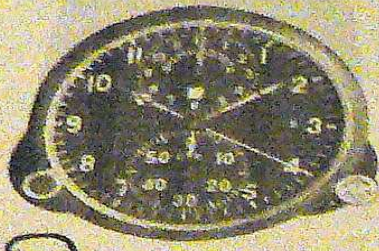

Turn left knob counter-clockwise  
Spring mechanism is wound up



Press left knob  
Status display is changed



Pull left knob outwards  
Adjustment position reached



Turn left knob CW/CCW  
Time is put forward or back  
(only hours and minutes)



Press left knob downwards  
Knob is in working position  
(protection from unintentional adjustment)



Turn right knob CCW  
Clock runs



Turn right knob CCW  
Clock stops



Press right knob  
Stop watch runs



Press right knob  
Stop watch OFF



Press right knob  
Stop watch reset  
(no addition measurement)